

THE ATT DELUXE RECEIVER

OPERATING INSTRUCTIONS



ADVANCED
TECHNOLOGY
TACKLE



ADVANCED
TECHNOLOGY
TACKLE

THE ATT DELUXE RECEIVER

LOCATED ON THE RIGHT HAND SIDE ARE 3 TACTILE BUTTONS:



THE TOP ONE IS USED TO MOVE UP A SELECTION;
FOR EXAMPLE INCREASING THE VOLUME OR TONE.



THE CENTRE ONE IS FOR PICKING A FUNCTION AND INITIAL
PROGRAMMING OF YOUR RECEIVER.



THE BOTTOM ONE IS FOR MOVING DOWN A SELECTION; FOR
EXAMPLE DECREASING THE TONE OR VOLUME.

RIGHT LET'S BEGIN WITH THE BASIC SET UP, ADDING AN ATTS ALARM
OR V2 DONGLE TO CHANNELS (LEDs) ON THE RECEIVER. PLEASE
READ EACH SECTION BEFORE TRYING TO PROGRAM THE RECEIVER.

GETTING INTO PROGRAM MODE

WITH THE RECEIVER OFF (SEE IMAGE 3), PUSH AND HOLD THE CENTRE PROGRAM BUTTON LOCATED ON RIGHT HAND SIDE OF RECEIVER WITH RECEIVER FACING YOU (SEE IMAGE 1), AND THEN TURN ON THE RECEIVER KEEPING THE BUTTON HELD UNTIL THE LEDs ALL COME ON, AT THIS POINT RELEASE THE BUTTON. IF ALL THE LIGHTS ARE ON WITH THE FIRST ONE FLASHING SLOWLY YOU ARE IN PROGRAM MODE! WELL DONE, HAVE A CHOCOLATE!



PROGRAM
BUTTON

IMAGE 1

PLEASE NOTE: FOR ALL PHOTOS,
PLEASE FOLD THE BACK PAGES OUT
FOR EASY REFERENCE WHEN USING
THESE INSTRUCTIONS.

PROGRAMMING ALARMS/DONGLES

IF YOU WANT AN ALARM/DONGLE PROGRAMMED ON THIS FIRST CHANNEL, SOUND/ACTIVATE IT FOR ONE "BEEP". THE LIGHT SHOULD GO OUT SHOWING YOU HAVE PROGRAMMED THE ALARM ON THIS CHANNEL. IF YOU WANT TO PROGRAM THE NEXT ALARM/DONGLE ON THE NEXT CHANNEL, THEN SOUND THE NEXT ALARM/DONGLE. IF YOU WISH TO SKIP OVER TO THE NEXT CHANNEL PUSH THE MIDDLE PROGRAM BUTTON. REPEAT THIS FOR ALL YOUR ALARMS/DONGLES. YOU CAN DO THIS UP TO THE FIFTH CHANNEL. IF YOU WISH TO ADD MORE THAN 5 DEVICES THEN CONTINUE YOU WILL THEN SEE THE FIRST LED "DOUBLE FLASHING" INDICATING THAT THE RECEIVER IS READY FOR THE 2ND ALARM/DONGLE ON THAT CHANNEL. WHEN YOU HAVE FINISHED ADDING THE ALARMS/DONGLES TURN THE RECEIVER OFF AND ON AGAIN AND IT IS READY TO USE.

SETTING DIFFERENT TONES

IF YOU DON'T WANT THE TONE TO BE THE SAME ON EACH CHANNEL, THIS IS HOW TO CHANGE IT! WITH THE RECEIVER OFF, PUSH AND HOLD THE PROGRAM BUTTON AND KEEPING IT HELD DOWN, TURN ON THE RECEIVER. AFTER A FEW SECONDS ALL THE LEDs WILL COME ON, WITH THE BUTTON STILL HELD DOWN WAIT AND THE LEDs WILL THEN GO OUT. RELEASE THE BUTTON, THE FIRST LED WILL BE FLASHING, THEN YOU CAN SCROLL WITH THE UPPER AND LOWER BUTTONS (SEE IMAGE 2) TO PICK A TONE. WHEN YOU HAVE THE TONE YOU LIKE, PUSH THE PROGRAM BUTTON (SEE IMAGE 1) TO MOVE ON TO THE NEXT ONE. IF YOU CLICK PAST THE 5TH CHANNEL THE FIRST LED WILL LIGHT UP AGAIN "DOUBLE FLASHING" INDICATING IT IS READY FOR TONE SETTING THE 2ND ALARM/DONGLE ON THAT CHANNEL. WHEN YOU HAVE PICKED THE TONES FOR ALL YOUR CHANNELS, TURN THE RECEIVER OFF AND ON TO COMPLETE THIS PROCESS.

RECEIVER OPERATION AND FEATURES

» **ADJUSTING THE VOLUME**

THIS IS DONE USING ANOTHER FIRST, SSI (SILENT STEP INCREMENTING) AS YOU INCREASE THE VOLUME SETTING BY PUSHING THE TOP BUTTON (SEE IMAGE 2). YOU CAN SEE THE LEDs LIGHTING UP MOVING FROM LEFT TO RIGHT SHOWING THE LEVEL YOU HAVE PICKED. IF YOU DECREASE THE VOLUME TO ZERO, VIBRATE IS ENGAGED AUTOMATICALLY BUT IF YOU WANT VIBRATE ON AT ANY TIME AS WELL AS THE VOLUME ABOVE ZERO YOU SIMPLY PRESS THE MIDDLE PROGRAM BUTTON (SEE IMAGE 1) FOUR TIMES TO ENABLE, SIGNALLED BY THE MOTOR VIBRATING, AND FOUR TIMES AGAIN TO DISENGAGE, SIGNALLED BY A SHORT PIP FROM THE RECEIVER.

» **LOW BATTERY**

THE RECEIVER IS POWERED BY 2 AA BATTERIES, WE RECOMMEND USING GOOD QUALITY ALKALINE CELLS. PLEASE NOTE THE POLARITY (SEE IMAGE 6). AT LEAST ONCE A YEAR OR FOR LONG PERIODS OF STORAGE/NO USE

PLEASE REMOVE THE BATTERIES FROM THE RECEIVER, THIS IS TO PROTECT IT IN CASE THERE IS A BATTERY LEAK. WHEN CHANGING OR FITTING THE BATTERIES, SLIDE THE BATTERY DOOR OPEN A SMALL WAY (SEE IMAGE 6A) AND LIFT THE COVER OFF.

INSERT THE BATTERIES SO THAT THE + IS AGAINST THE FLAT TABS AND THE - IS AGAINST THE SPRINGS, IT IS EASIER TO PUSH THE BATTERY DOWN AGAINST THE SPRING AND TUCK IN TO THE + TAB THAN TO TRY AND PUSH THE BATTERY IN DIRECTLY.

IF THE RECEIVER DETECTS THE BATTERIES ARE GETTING LOW IT WILL EMIT A SHORT PIP AND LIGHT THE LEDs UP EVERY FEW MINUTES, WE HAVE SET THE WARNING TO COME INTO EFFECT AT A VOLTAGE THAT SHOULD STILL ENABLE YOU TO USE THE RECEIVER FOR A LONG PERIOD EVEN WITH VIBRATE MODE BEING ACTIVE. TYPICALLY IN FIELD TESTS, USERS HAD OVER 3 WEEKS FULL (24HR) USAGE WHILST ON LOW BATTERIES!

» FITTING A LANYARD

THE TOP CENTRE OF THE RECEIVER (SEE IMAGE 3) FEATURES AN ANCHOR POINT FOR THE ATT LANYARD (AVAILABLE SEPARATELY) THIS CAN BE FITTED BY FEEDING THROUGH THE HOLE OR LAYING IN THE NOTCH (SEE IMAGE 4) WHEN THE RECEIVER IS "OPEN" FOR LED LENS CHANGING.

» CHANGING THE LED LENSES

THE RECEIVER IS SUPPLIED WITH OUR 7 COLOUR OPTIONS MOULDED LENSES BUT OBVIOUSLY THE TWO EXTRA COLOURS ARE SUPPLIED IN THE RECEIVER CARTON. THEY ARE LOCATED IN THE BATTERY COMPARTMENT OF THE RECEIVER WHEN NEW.

TO CHANGE THE LED LENSES TO SUIT A MORE PERSONAL COLOUR ROLL OUT ETC, THE RECEIVER NEEDS TO BE OPENED AND THE LENSES CHANGED FROM "INSIDE" THIS SOUNDS DAUNTING, IT ISN'T AND REALISTICALLY IS

A VERY INFREQUENT, IF NOT A “ONE OFF” TASK. THE LENSES ARE FITTED FROM INSIDE TO MAINTAIN THE WATER RESISTANT FEATURE OF THE DELUXE RECEIVER.

PLACE THE RECEIVER FACE DOWN ON A SOFT CLOTH OR NON ABRASIVE SURFACE. FIRST REMOVE THE BATTERY DOOR (SEE IMAGE 5) AND THE BATTERIES IF FITTED.

YOU CAN NOW SEE THE 4 CASE SCREWS (SEE IMAGE 6) REMOVE THESE FOUR SCREWS CAREFULLY USING A SMALL POZIDRIVE SCREWDRIVER AND SET THEM ASIDE.

NOW CAREFULLY LIFT THE RECEIVER BACK PLATE FROM THE BOTTOM UPWARDS AND SLIDE FORWARDS TOWARDS THE TOP (SEE IMAGE 7) CAREFULLY UNHOOKING FROM THE TAB LOCATED ON THE ANTENNA STUB (SEE IMAGE 8) AND SET THIS TO ONE SIDE. YOU WILL NOW BE FACING

THE PCB (SEE IMAGE 9), THIS NEEDS TO BE MOVED TO GET TO THE LED LENS BAY, LIFT IT CAREFULLY WITH YOUR THUMB AND FOREFINGER FROM THE BOTTOM WHERE THE VIBRATE MOTOR IS FITTED, AND DRAW IT BACK AWAY FROM THE TOP OF THE RECEIVER TAKING CARE NOT TO UNCLIP THE GASKET FROM THE RECEIVER CASE (IF YOU DO REMOVE THE GASKET IT CAN BE REFITTED) THEN "FOLD" THE PCB OVER TO FACE DOWN BELOW THE RECEIVER (SEE IMAGE 10). YOU CAN NOW SEE THE REAR OF THE 5 LED LENSES, NOTE THE BLACK FOAM LIGHT SHIELD AROUND THE MIDDLE 3. (SEE IMAGE 11). REMOVE THE COLOURS YOU WISH TO REPLACE AND THEN REFIT YOUR CHOSEN COLOURS, TAKE CARE THAT THE LENS SITS SNUGLY IN THE SEAL AND THAT THE BLACK FOAM LIGHT SHIELD IS REFITTED CORRECTLY AS PER (SEE IMAGE 11).

RE-ASSEMBLY IS PRETTY MUCH THE REVERSE OF THE ABOVE, THE ONLY POINTS TO NOTE ARE THAT THE PCB SITS ON THE LOCATING POST (SEE

IMAGE 13) THAT THE GASKET IS STILL SEATED ON THE TONGUE OF THE RECEIVER FRONT, KEY POINTS TO CHECK ARE IN IMAGE 12.

NOTE THAT THE ON/OFF SWITCH GOES THROUGH THE GASKET AS IN 12B AND THAT 12C THE PROGRAM BUTTON SEGMENT IS A “SANDWICH” OF THE + P – INSERT, THE GASKET AND THEN THE INNER PLATE, NOTE THE PLATE IS FITTED SO THAT THE REBATE IS FITTED INTO THE GASKET AND NOT THE RECEIVER. ALSO NOTE THAT THE TAB AS IN 12D PASSES THROUGH THE HOLE IN THE GASKET NOT AROUND IT.

ADDITIONAL PACKS OF LENSES ARE AVAILABLE SO YOU CAN MAKE YOUR RECEIVER ANY COMBINATION YOU REQUIRE! PACKED IN 4 OF A SINGLE COLOUR, PLEASE CHECK **WWW.ATTACKLE.COM** FOR MORE INFORMATION.

ALL THE ABOVE IS REPEATED ON THE WEBSITE: **WWW.ATTACKLE.COM**

COPIES OF THIS MANUAL ARE ALSO THERE AT: **HTTP://WWW.ATTACKLE.COM/EN/SUPPORT**

WARRANTY DETAILS

THE ATTX DELUXE RECEIVER COMES WITH A TWO YEAR BACK TO BASE CONDITIONAL WARRANTY.

IF A WARRANTY REPAIR IS NEEDED PLEASE RETURN THE PRODUCT AS WAS PURCHASED ALONG WITH ALL PACKAGING AND YOUR ORIGINAL PURCHASE RECEIPT.

ATT RESERVE THE RIGHT TO REPAIR OR REPLACE FAULTY PRODUCTS AT THEIR DISCRETION, ANY PRODUCTS RETURNED WITHOUT A VALID PURCHASE RECEIPT OR FOUND NOT TO BE FAULTY MAY INCUR A CHARGE. UNITS SENT WITH FLAT BATTERIES WILL BE RETURNED WITH NO BATTERIES.

WARRANTY IS NOT VALID WITHOUT PROOF OF PURCHASE.

NONE OF THE ABOVE AFFECTS IN ANY WAY YOUR STATUTORY RIGHTS.

THE FOLLOWING TWO PAGES ARE LINKED AND FOLD OUT SO THAT YOU MAY SEE ALL THE RELEVANT IMAGES AT ONCE WHILST READING THE INSTRUCTIONS.

ALL THE ENCLOSED CAN BE FOUND ON:
WWW.ATTACKLE.COM

OR FOR MORE SPECIFIC QUESTIONS, PLEASE SEND AN E-MAIL TO:
DELUXERX@ATTACKLE.COM



THE ATT DELUXE RECEIVER - PHOTOS

UK



IMAGE 1

PROGRAM
BUTTON

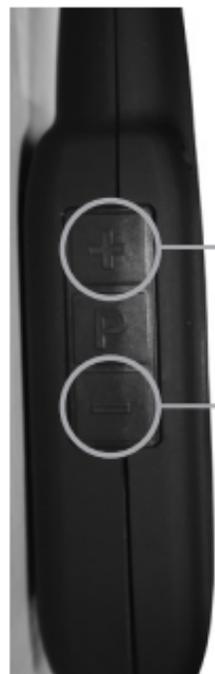


IMAGE 2

UP
BUTTON

DOWN
BUTTON



IMAGE 3

ON/OFF TOGGLE



IMAGE 4



IMAGE 5



IMAGE 6

THE ATT DELUXE RECEIVER - PHOTOS



IMAGE 6A



IMAGE 8



IMAGE 9

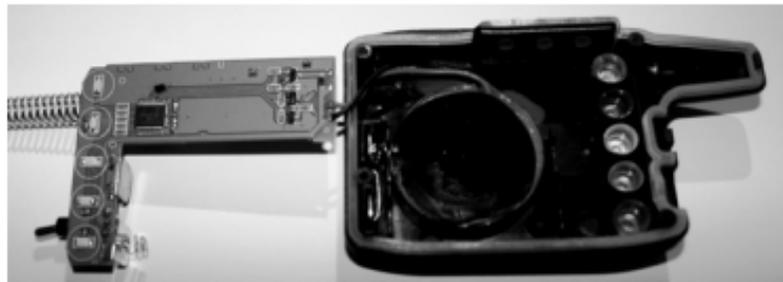



IMAGE 10



IMAGE 7




IMAGE 11

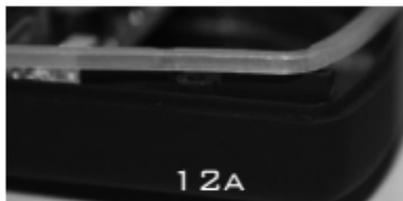

12A



12B

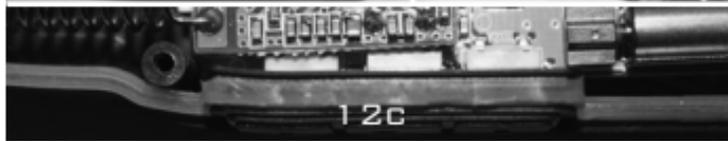

12C



12D

IMAGE 12



IMAGE 13



ATTX IS A REGISTERED TRADE MARK. UK AND EUROPEAN PATENTS APPLIED FOR.
WE RESERVE THE RIGHT TO ALTER OR MODIFY SPECIFICATIONS WITHOUT PRIOR NOTIFICATION.

**ADVANCED TECHNOLOGY TACKLE,
PO BOX 962,
DAGENHAM,
RM9 9LT,
UNITED KINGDOM.**

TEL:+44(0) 208592 3329